 
 
 
 
 






No.	Tone	dB(A) max.
T1	1.6kHz	88
T2	3.4kHz	100
T3	 1.6kHz	88
T4	 3.4kHz	100
T5	 1.6kHz	86
T6	 3.4kHz	96
T7	 3.4kHz	90

 0 - 100 dB(A)





1	2	3	4	5	No.
NC	NC	NC	-	-	-
+24V	+24V	NC	-	-	T1
+24V	+24V	+24V	-	-	T2
+24V	NC	NC	-	-	T3
+24V	NC	+24V	-	-	T4
NC	+24V	NC	-	-	T5
NC	+24V	+24V	-	-	T6
NC	NC	+24V	-	-	T7

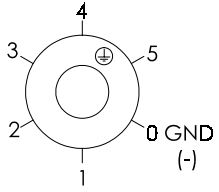





1	2	3	4	5	No.
S1	NC	NC	NC	-	-
	+24V	+24V	NC	-	T1
	+24V	+24V	+24V	-	T2
	+24V	NC	NC	-	T3
	+24V	NC	+24V	-	T4
	NC	+24V	NC	-	T5
	NC	+24V	+24V	-	T6
	NC	NC	+24V	-	T7

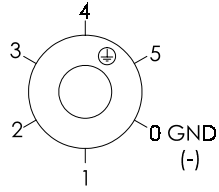

 



1	2	3	4	5	No.
S1	S2	NC	NC	NC	-
		+24V	+24V	NC	T1
		+24V	+24V	+24V	T2
		+24V	NC	NC	T3
		+24V	NC	+24V	T4
		NC	+24V	NC	T5
		NC	+24V	+24V	T6
		NC	NC	+24V	T7

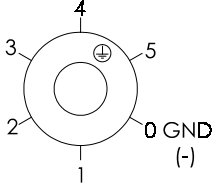




1	2	3	4	5	No.
S1	S2	S3	NC	NC	-
			+24V	+24V	T1
			+24V	NC	T3
			NC	+24V	T5

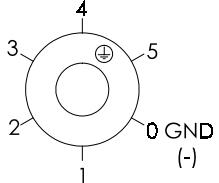



1	2	3	4	5	No.
S1	S2	S3	S4	NC	-
				+24V	T3

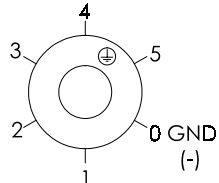

Vor Tönänderung ist die Versorgungsspannung auszuschalten / Power supply must be switched off before tone is changed / L'Alimentation doit être interrompue avant que le son soit changé.