

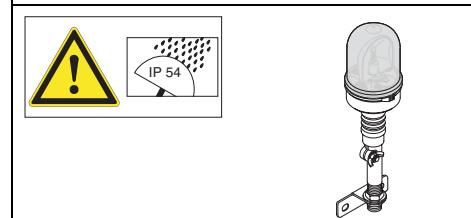


(D) Anschluss **ausschließlich** durch ausgebildete Elektro-Fachkräfte.
 (GB) Electrical connection is to be made by trained electrical specialists **only**.
 (F) Le branchement doit **uniquement** être effectué par des professionnels.
 (I) Il collegamento deve essere eseguito **solo** da elettricisti specializzati.
 (E) La conexión **sólo** debe ser realizada por electricistas debidamente formados.
 (PT) A ligação deve ser feita **exclusivamente** por profissional eléctrico especializado.
 (CZ) Připojení smí **provádět** pouze kvalifikovaný personál.
 (PL) Podłączenie **wyłącznie** przez specjalistów-elektryków.
 (FI) Liittäminen kuuluu **ainoastaan** koulutettujen sähköalan ammattilaisten tehtäviin.
 (RUS) Подключение проводится только специалистом-электриком.
 (TR) Bağlantı **sadece** eğitimli elektrik teknisyenleri tarafından yapılmalıdır.
 (CN) 布线需由专业电工执行

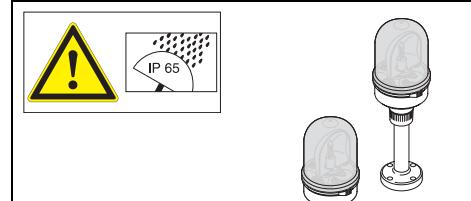


885 xx0 54	12 V=, 1,7 A
885 xx0 75	24 V≈, 1,0 A
885 x00 78	115 V≈/230 V≈, 0,18 A/0,09 A
885 x10 78	115 V≈/230 V≈, 0,18 A/0,09 A

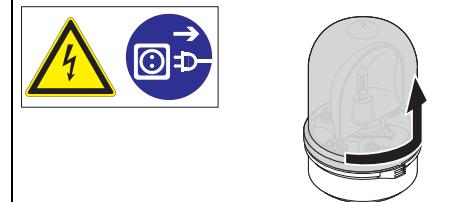




955 885 24 20 W / 12 V, 115 / 230 V
 955 885 25 20 W / 24 V




975 826 20

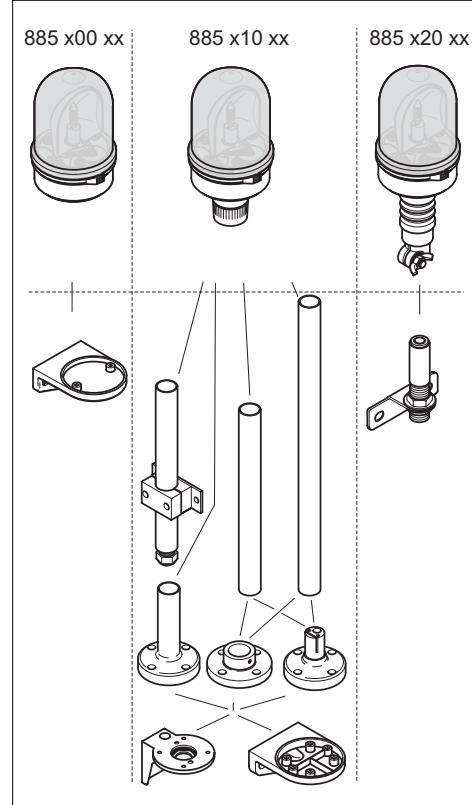


1 1a - 885 x00
 1b - 885 x10, 885 x20 + 975 840 90,
 975 840 91

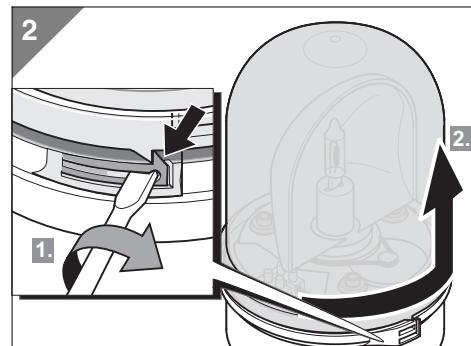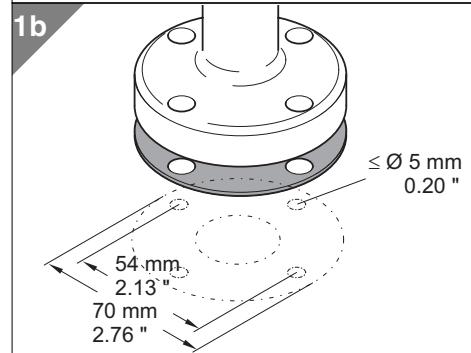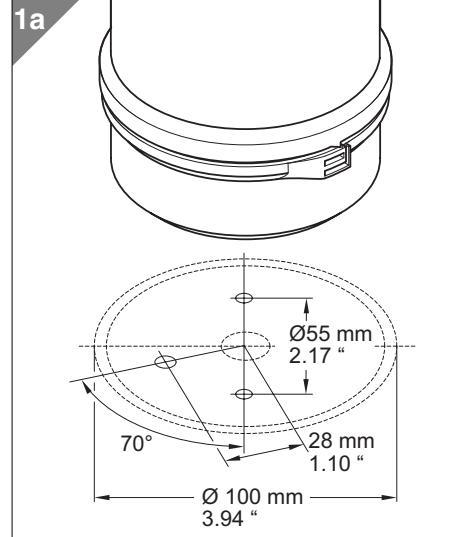



3
3a - 885 x00
3b - 885 x00 + 975 826 05

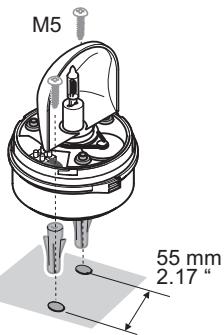





3b

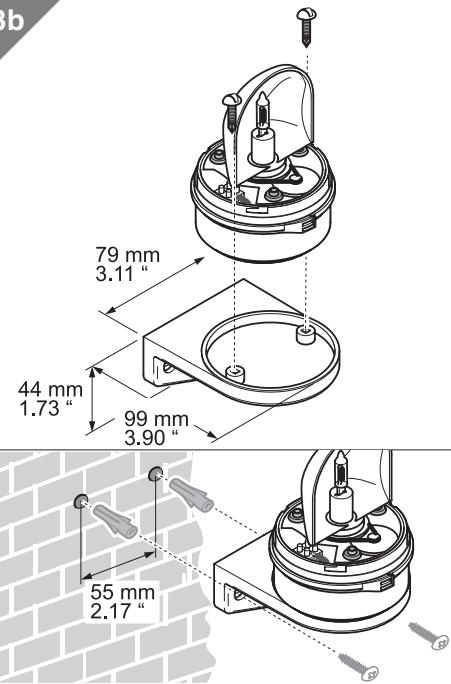





4
4a - 885 x00, 885 x10
4b - 885 x20

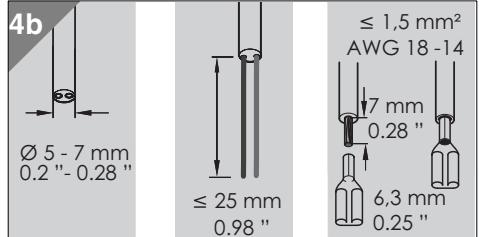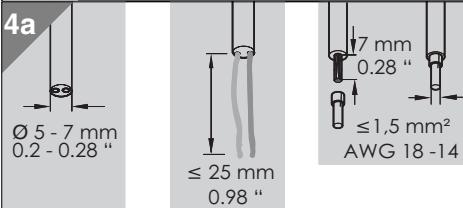

5
5a - 885 x00
5b - 885 x10 + 975 840 90, 975 840 91
5c - 975 826 20
5d - 885 x20 + 975 826 20

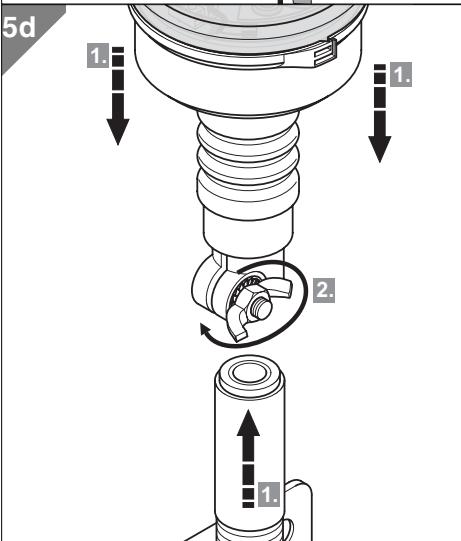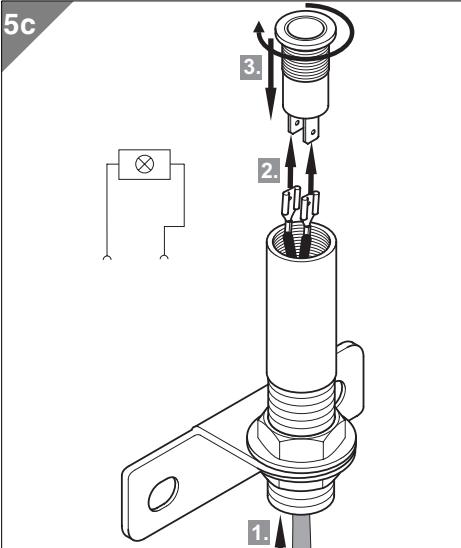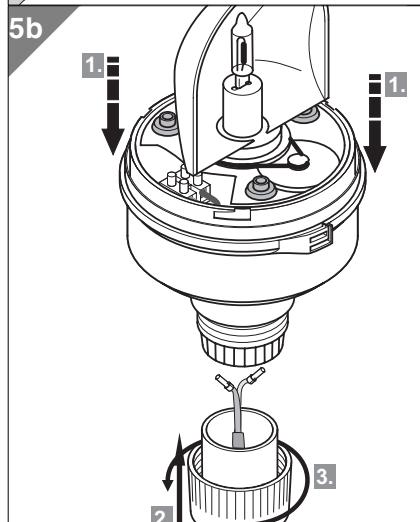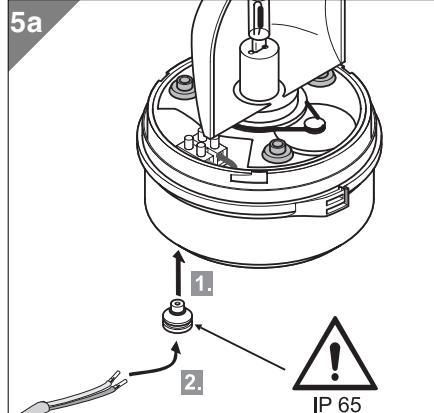

6
885 x00, 885 x10

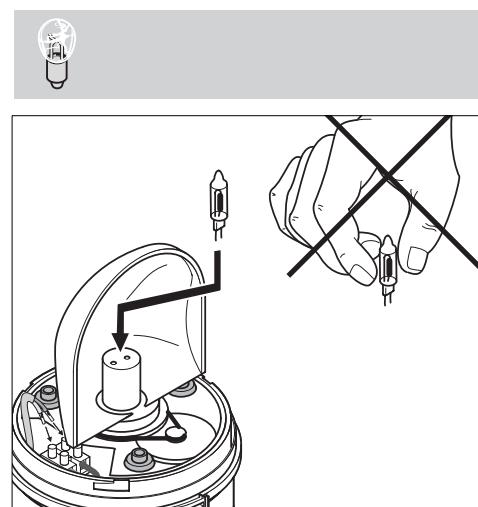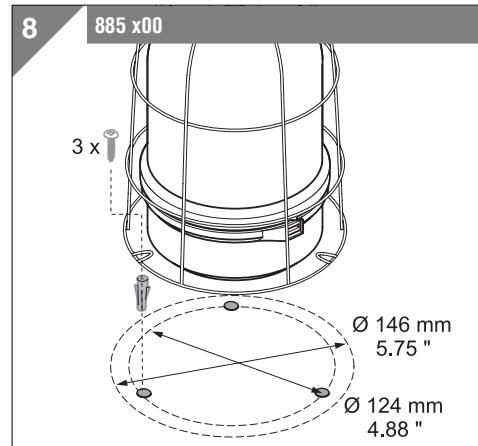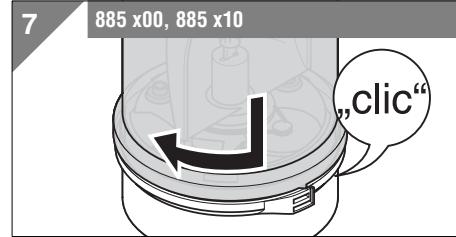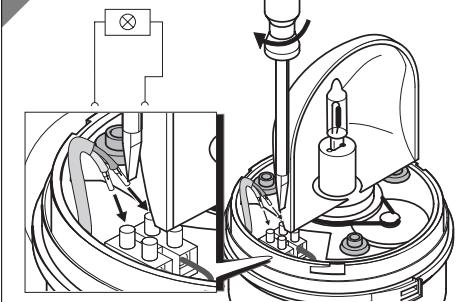

310.885.001.0907

© D

WERMA
SIGNALTECHNIK